

● Oversigt



● Specifikationer

Camera	
Imaging Sensor Type	1/4-inch Color CMOS
Effective Pixels	640×480
View Angle (horizontal)	max. 62
Minimum Illumination	< 15Lux (IR off) / 2 (IR on)
Night Vision Distance	ca. 5 m
Sound Detection Sensitivity	< -38db
Transmission Frequency	2.400 ~ 2.483.5 MHz
Transmission Power	1a7 ± 2 dBm
Receiving Sensitivity	min. -80 dBm
Modulation Mode	GFSK
Unobstructed Effective Range	> 300 m
Power Supply	DC +5V
Operating Temperature	-10°C ~ +45°C
Operating Humidity	20% ~ 85% RH
Dimensions (LxWxH)	80 x 80 x 170 mm
Weight	110 g


Receiver	
LCD Screen Type	3.5" TFT LCD
LCD Screen Resolution	320 × 240
Bandwidth	3 MHz
Transmission Rate	3 Mbps
Consumption Current	max. 950 MA
Sound Detection Sensitivity	≤ -38db
Operating Frequency	2400 ~ 2483.5 MHz
Transmitting Power	17 ± 2 dBm
Receiving Sensitivity	min. -80 dBm
Demodulating Method	GFSK
Unobstructed Effective Range	> 300 m
Power Supply	DC +5V
Operating Temperature	-10°C ~ +40°C
Operating Humidity	20% ~ 85% RH
Dimensions (LxWxH)	119.7 x 81.9 x 27 mm
Weight	180 g

*All the specifications are subject to minor change without prior notice.

● Opstart

Kamera

1. Slut kameraet med den medleverede strømforsyning til i stikkontakten.
2. Hold kameraets tænd/sluk taste nede i ca. 3 sekunder, til displayet lyser. Kameraet er nu operationsdygtig.
3. Hold igen kameraets tænd/sluk taste nede i ca. 3 sekunder, indtil kontrollampen slukker. Kameraet er nu slukket.

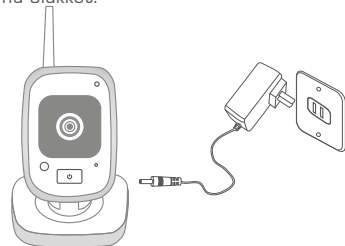


Monitor

Hold skærmens tænd/sluk taste nede i ca. 3 sekunder, til displayet lyser. Skærmen er nu operationsdygtig.

Hold igen skærmens tænd/sluk taste nede i ca. 3 sekunder, til kontrollampen slukker. Skærmen er nu slukket.



Oplad

Når batterisymbolet  blinker rødt, er batteriet næsten tomt. Mens der lades, lyser symbolet orange. Ved komplet ladning lyser symbolet grøn.

● Brug

Parring

Kameraet og skærmen skal kobles sammen:

1. Tryk på kanal-tasten  på skærmen, for at indstille en kanal. Der er 4 forskellige kanaler til rådighed og bliver vist med symbolet .
2. Tryk på koblings-tasten på bagsiden af skærmen i ca. 3 sekunder, til displayet blinker. Tryk igen (indenfor 10 sekunder) på koblingstasten i ca. 3 sekunder, indtil billedet kommer frem på skærmen.



- In monitoring mode, press the Power button of the monitor to switch between Fahrenheit and Celsius.
- In monitoring mode, if no operation within 60 seconds, the monitor will turn into energy-saving mode. Press any key to recover.

Talking

1. Keep pressing the Talking button of the monitor and the indicator light will on. The Talking icon will also appear on the screen. Then talk in front of the microphone of the monitor, and voice can be heard at the camera side. Attention: The talking function is two-way, but it works only one-way at a time. So the voice from the camera side cannot be heard while keeping the Talking button pressed.
2. Let go of the Talking button, and the voice from the camera side can be heard at the monitor side.



- The volume indicator increases when baby cries louder.
- The monitor enters the power saving mode (i.e. blank screen), when the baby cries, the screen will be automatically activated, and restore the monitor picture.